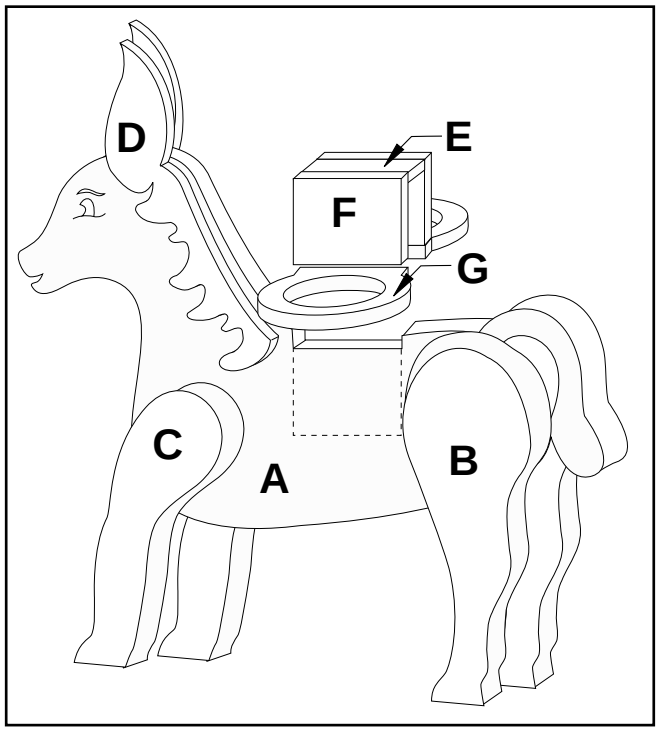
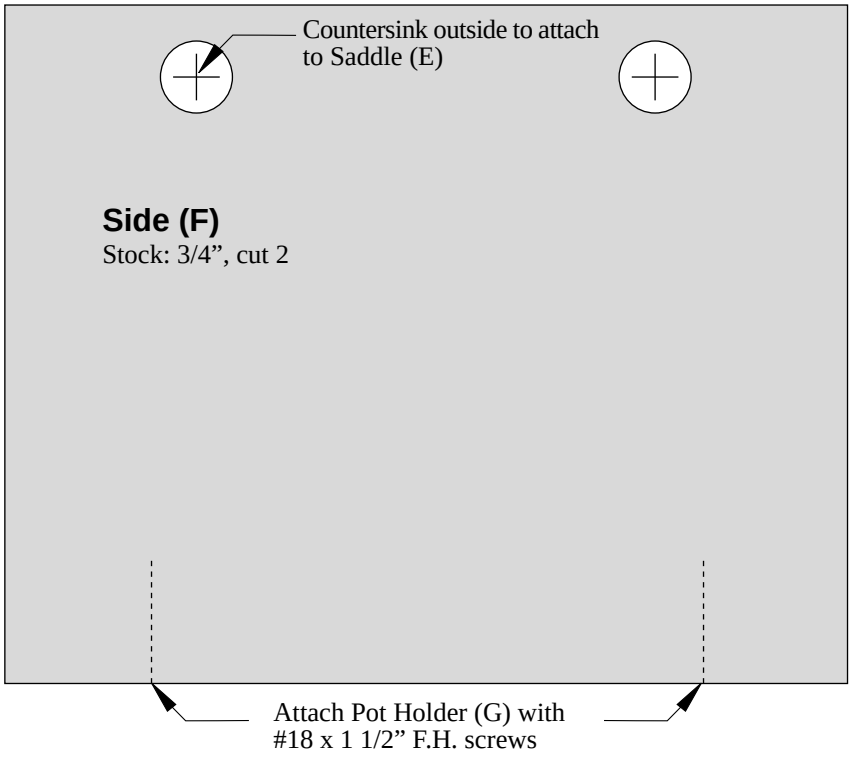






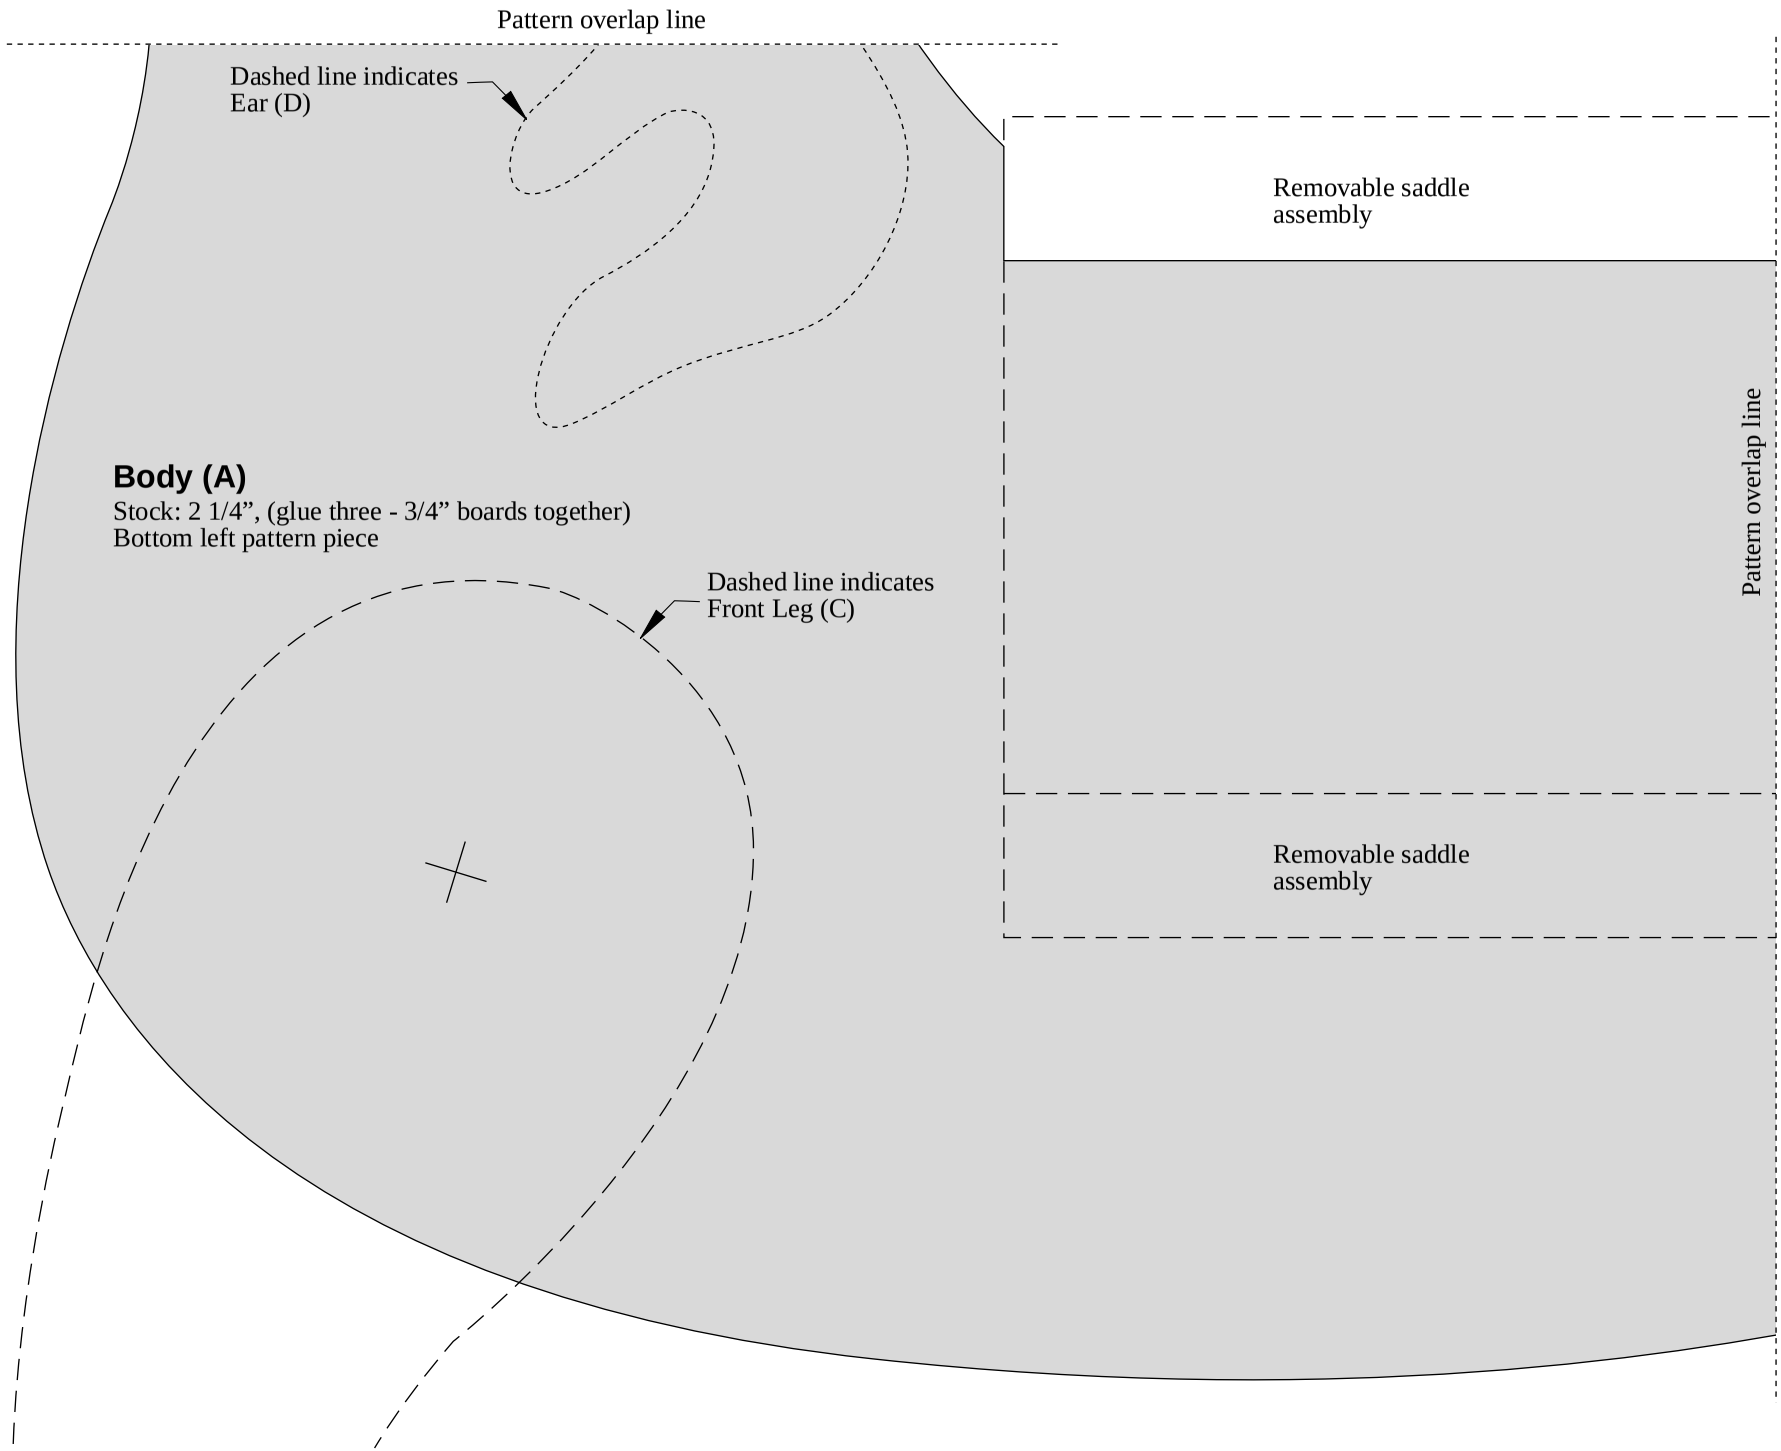
1. Select your material from a variety of hardwoods or solid core plywood.
2. Measure each pattern piece and cut the work pieces to size accordingly. Sand as necessary.
3. Make all pattern pieces by adhering the paper patterns to the work pieces with a repositionable spray adhesive. Cut the outer shapes and any interior designs. And drill where indicated.
4. Remove all paper patterns. Sand where needed. The edges can be rounded by sanding or using a small roundover router bit if desired.
5. Assemble by first attaching the Legs and Ears to the Body. Next attach the Sides to the Saddle, and the Pot Holders to the bottom of the Sides. Finish as desired.

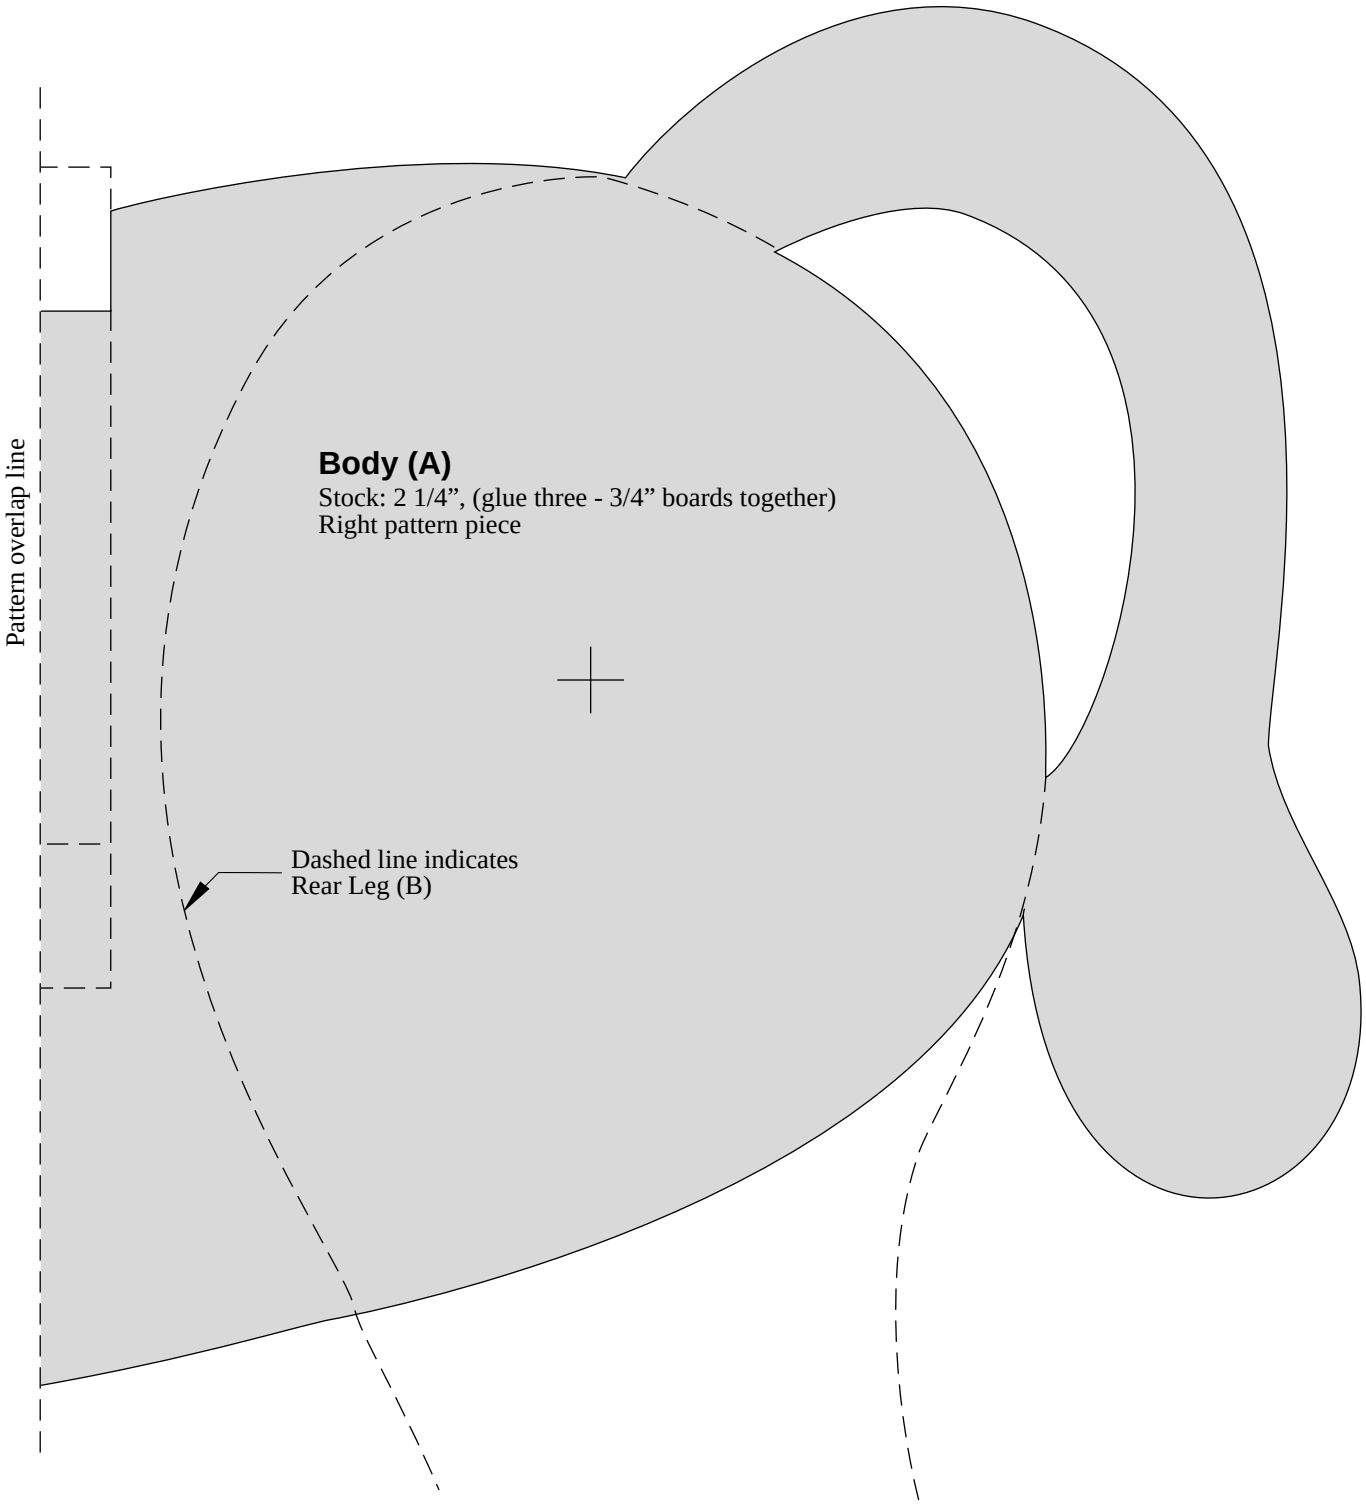
Description	Item	Qty	Size
Body	A	1	2 1/4”T x 13 1/4”W x 20”L
Rear Leg	B	2	3/4”T x 4 7/8”W x 12 3/4”L
Front Leg	C	2	3/4”T x 3 1/2”W x 10 3/4”L
Ear	D	2	3/4”T x 3 1/2”W x 12 1/4”L
Saddle	E	1	3/4”T x 2 1/4”W x 4 3/8”L
Side	F	2	3/4”T x 3 1/2”W x 4 3/8”L
Pot Holder	G	2	3/4”T x 6 1/4”W x 6 1/4”L

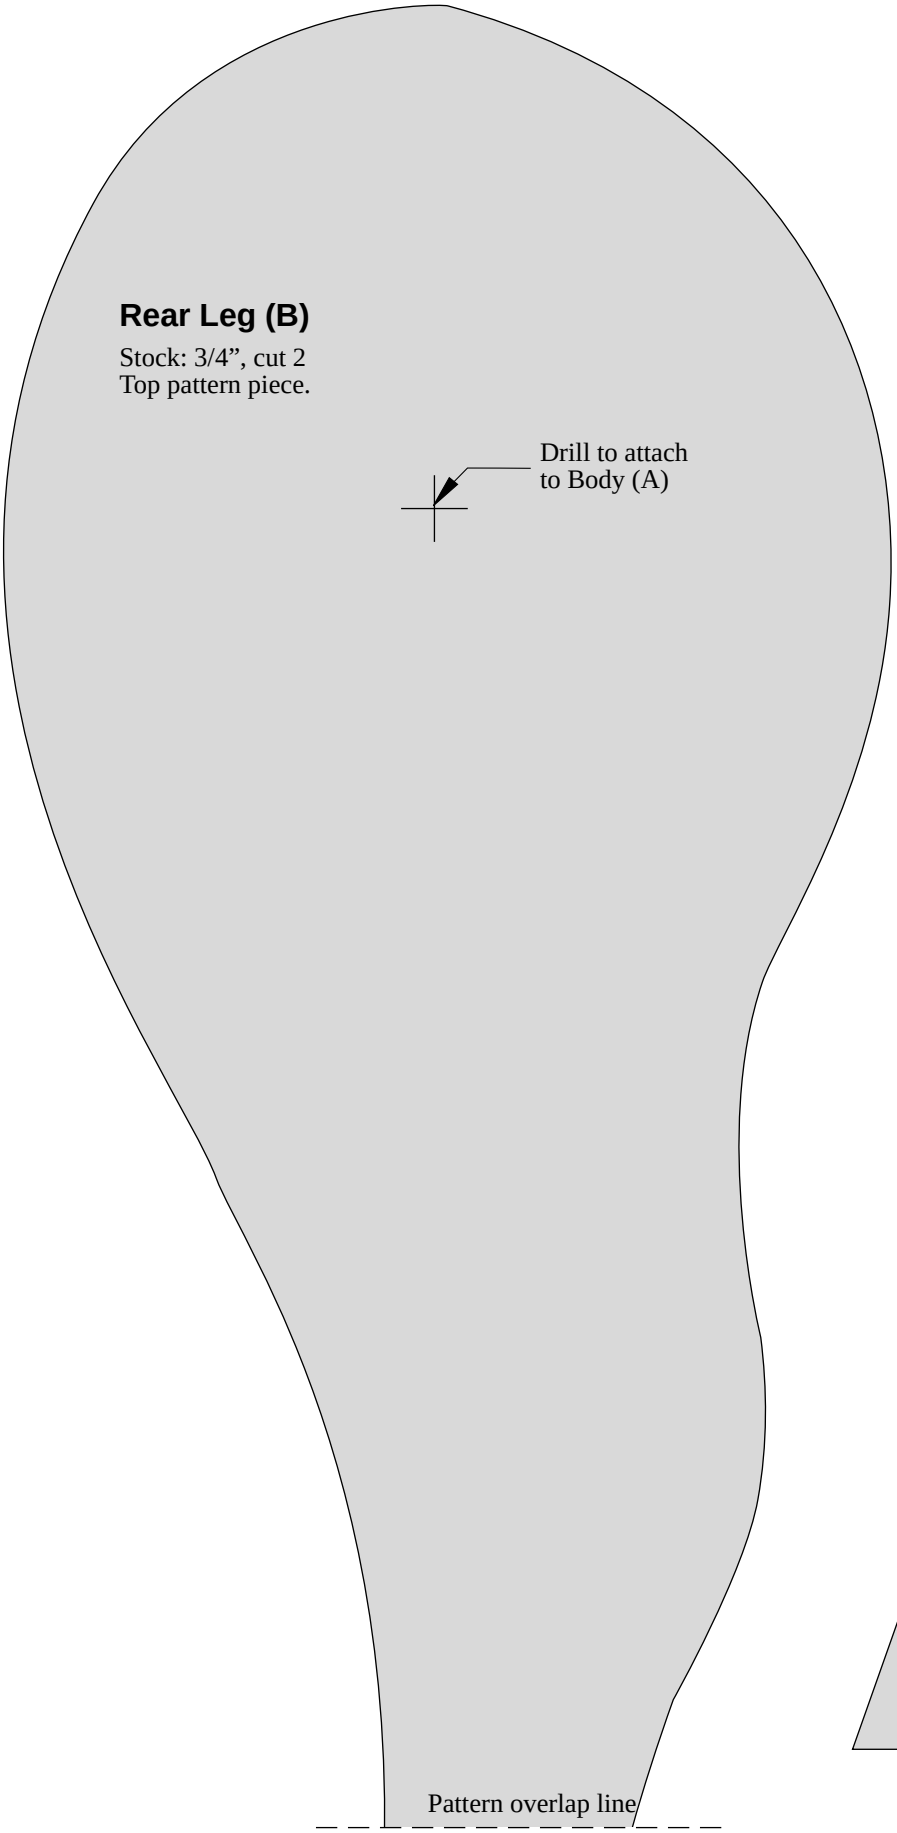
Saddle (E)
Stock: 3/4”

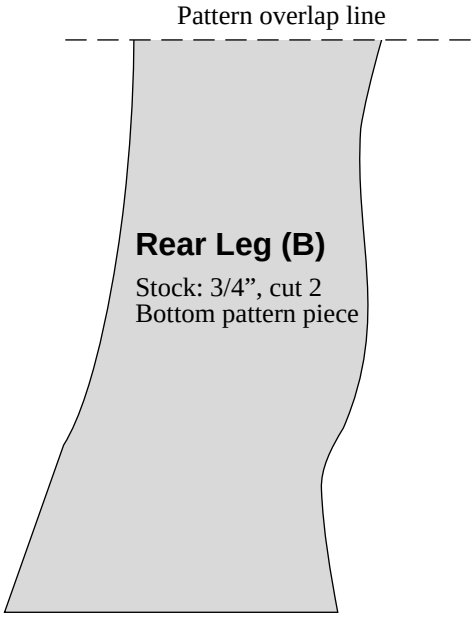
Body (A)
Stock: 2 1/4”, (glue three - 3/4” boards together)
Top left pattern piece

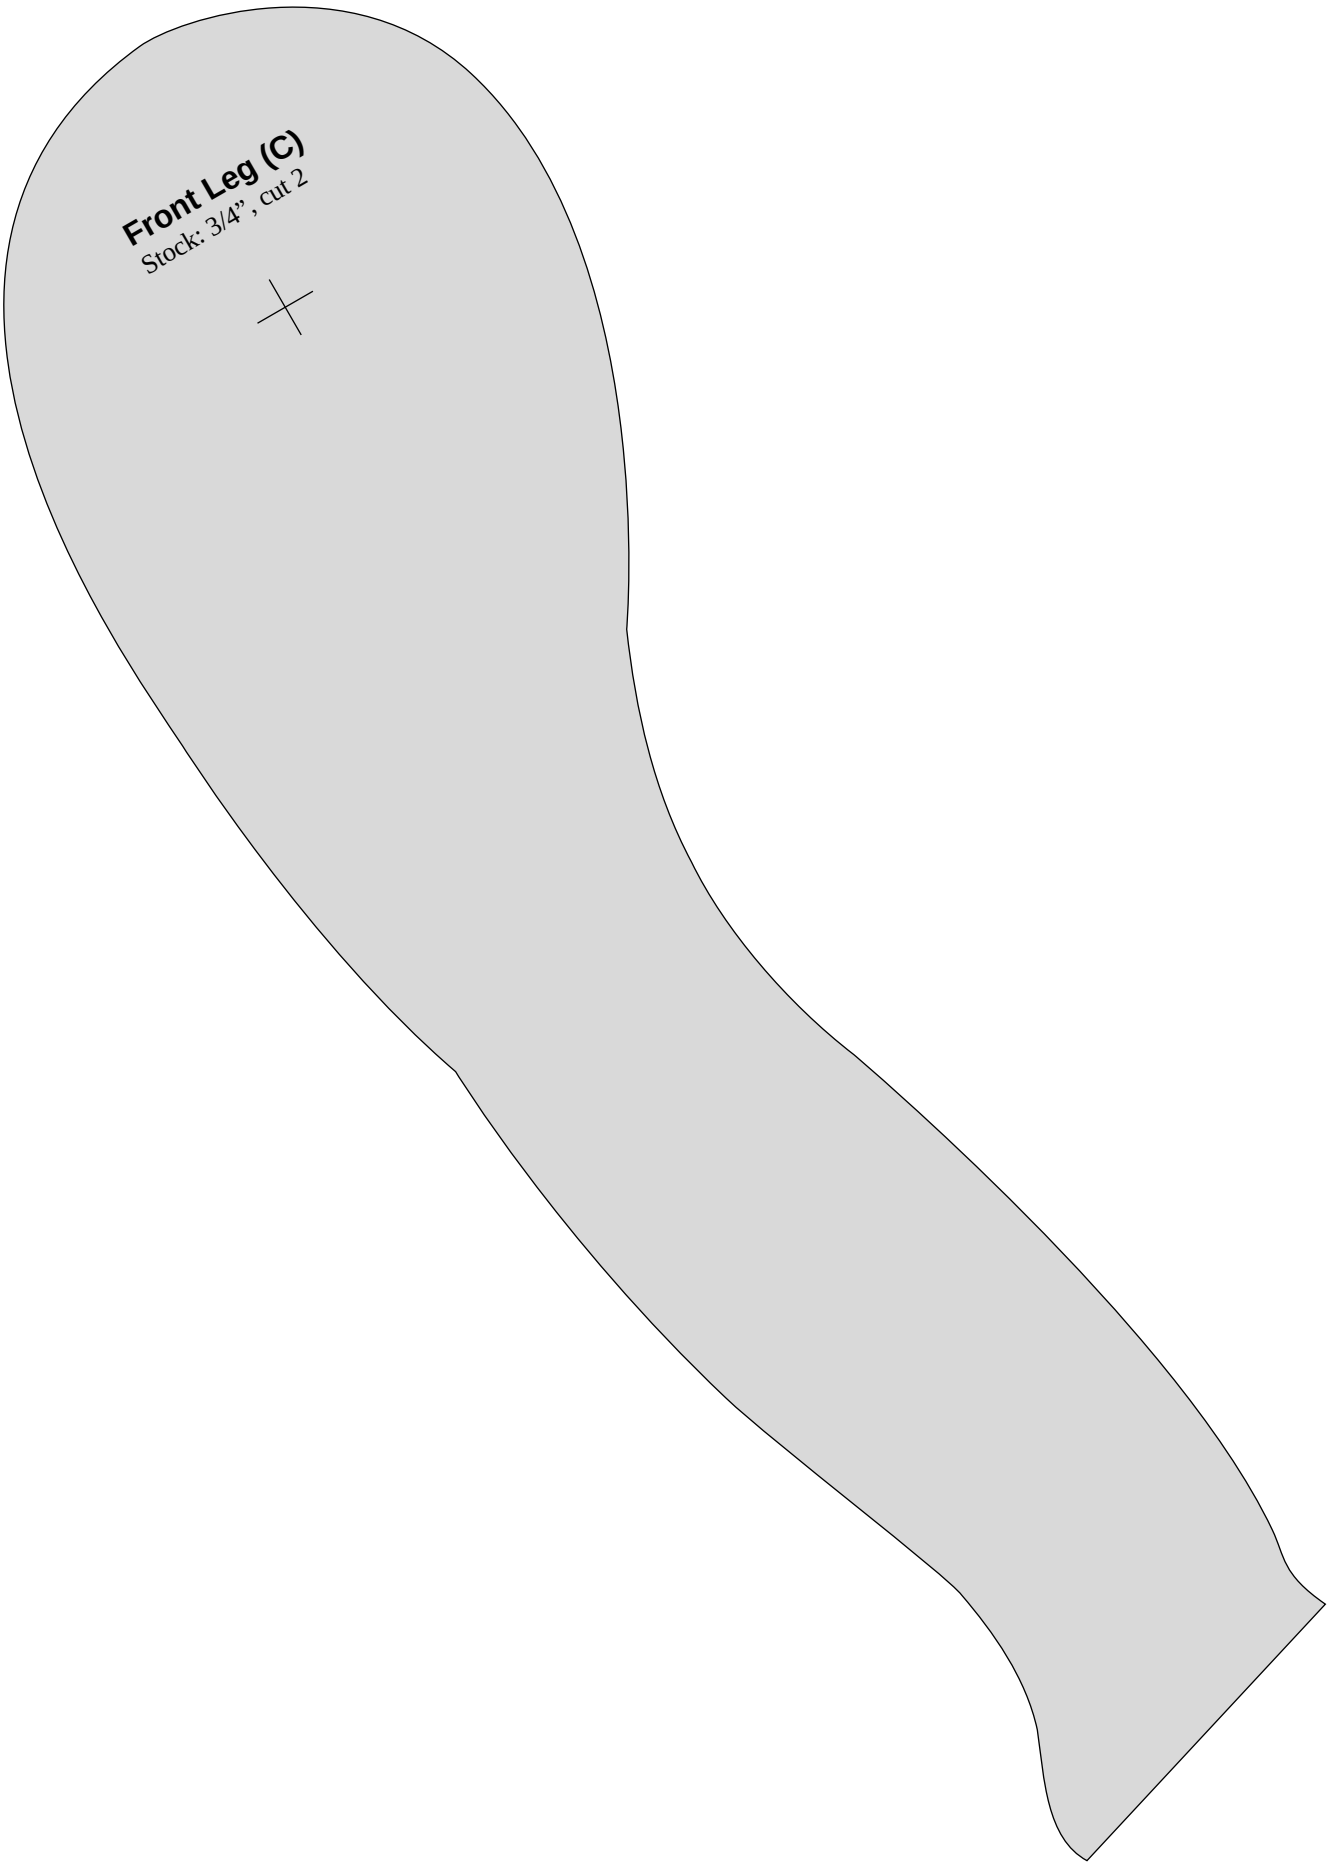
Pattern overlap line

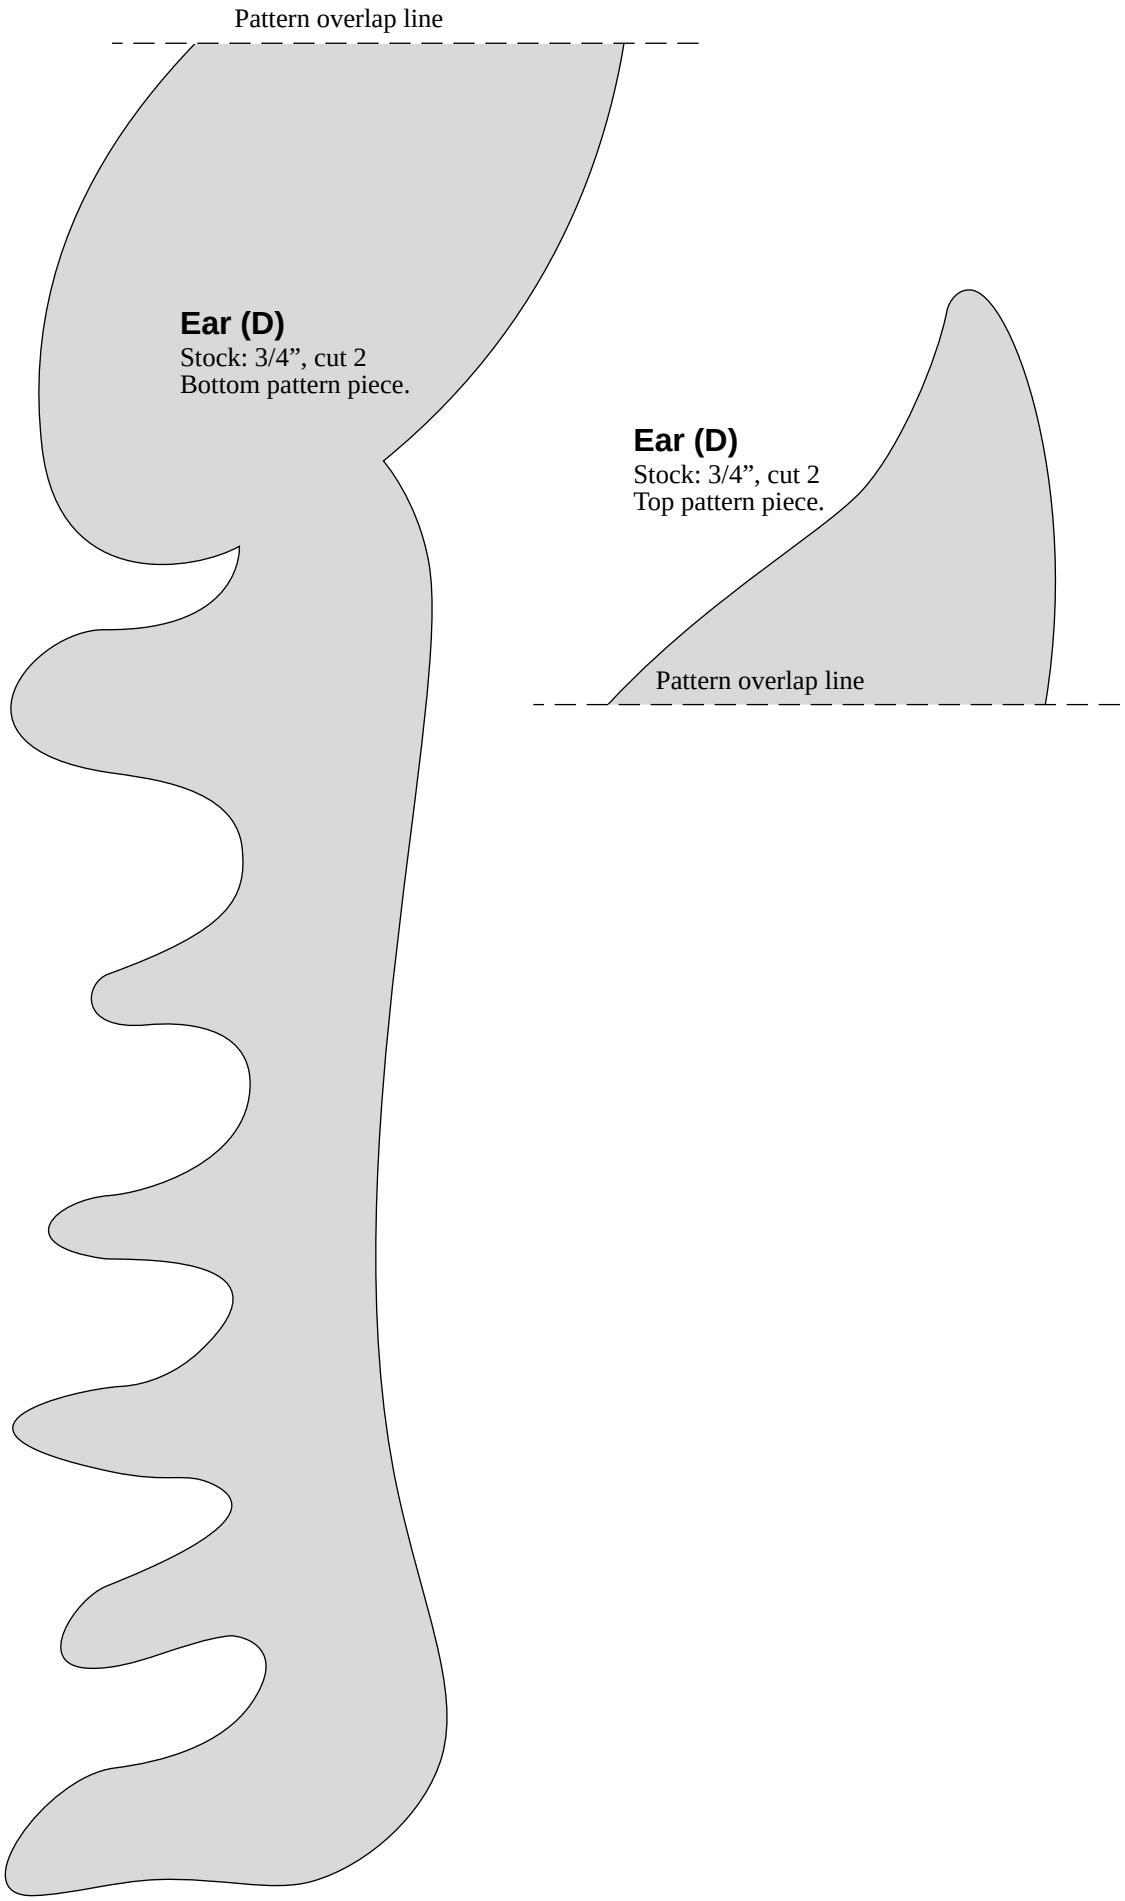

Pattern overlap line
Dashed line indicates
Ear (D)
Removable saddle
assembly
Body (A)
Stock: 2 1/4”, (glue three - 3/4” boards together)
Bottom left pattern piece
Pattern overlap line
Dashed line indicates
Front Leg (C)
Removable saddle
assembly

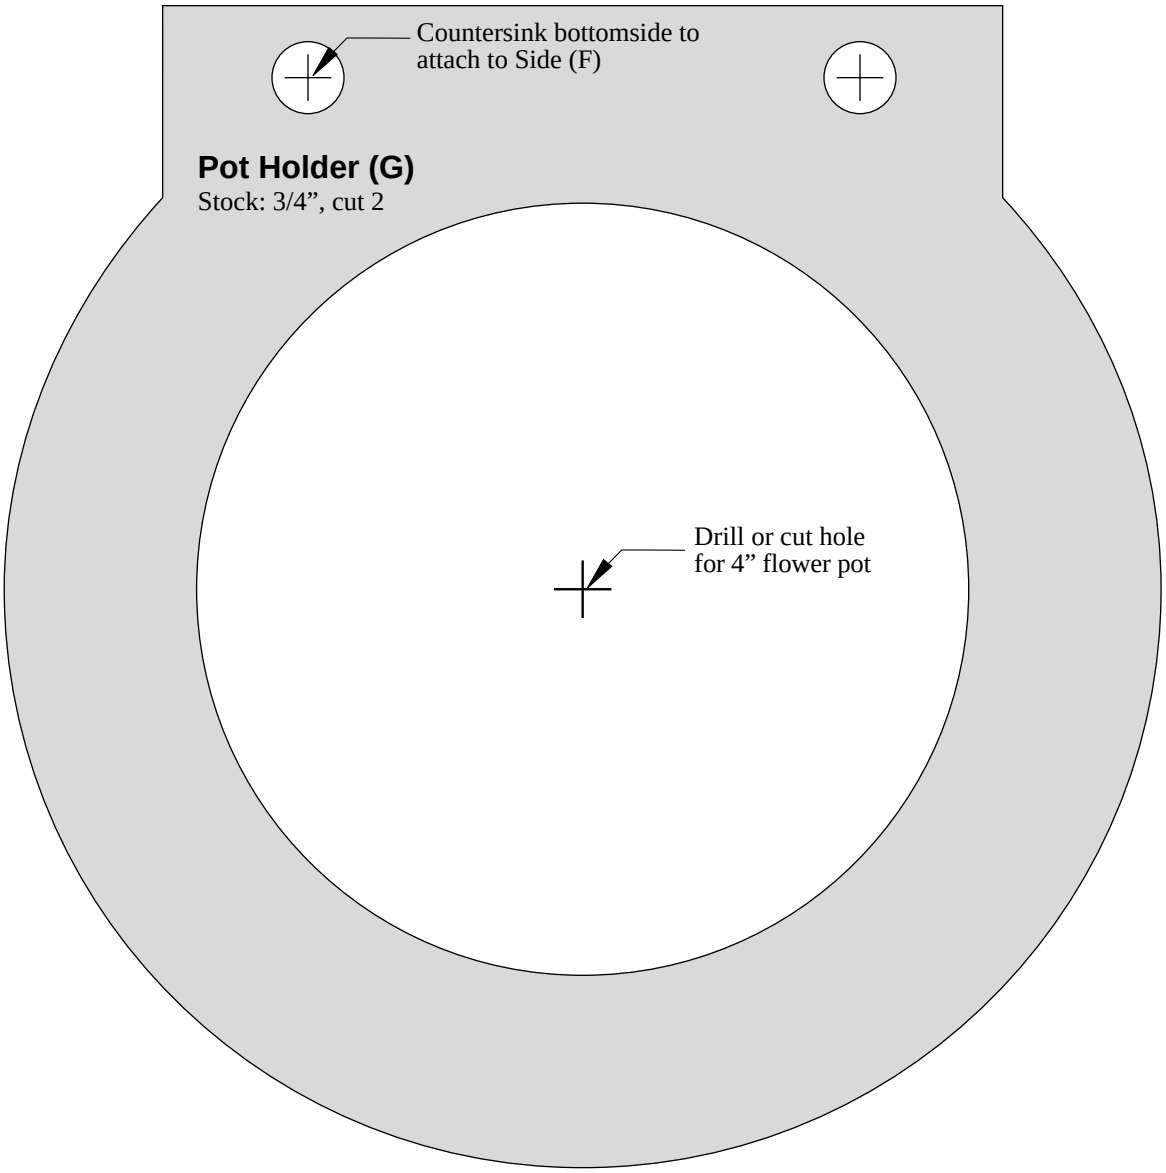

Pattern overlap line
Body (A)
Stock: 2 1/4”, (glue three - 3/4” boards together)
Right pattern piece
Dashed line indicates
Rear Leg (B)


Rear Leg (B)
Stock: 3/4”, cut 2
Top pattern piece.
Drill to attach
to Body (A)
Pattern overlap line


Pattern overlap line
Rear Leg (B)
Stock: 3/4”, cut 2
Bottom pattern piece


Front Leg (C)
Stock: 3/4", cut 2


Pattern overlap line
Ear (D)
Stock: 3/4”, cut 2
Bottom pattern piece.
Ear (D)
Stock: 3/4”, cut 2
Top pattern piece.
Pattern overlap line


Countersink bottomside to
attach to Side (F)
Pot Holder (G)
Stock: 3/4”, cut 2
Drill or cut hole
for 4” flower pot